



KÜRBIS™

cinema 2.0 speakers

QUICK GUIDE
GUÍA RÁPIDA DE USO

_01 SYSTEM INSTALLATION


A.




B.




C.

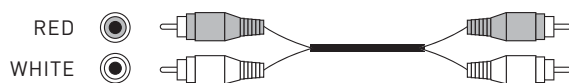

Double RCA Stereo Auxiliary Cable (not included)

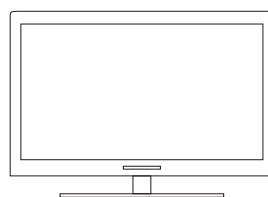


RCA Stereo to 3.5 mm Stereo Auxiliary Cable (included)

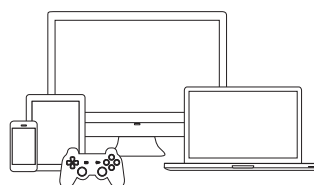

D.




Optical Cable (not included)

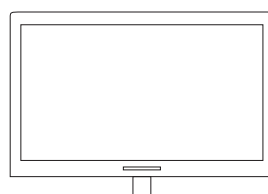


E.



Power Cable (included)

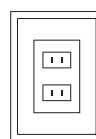

F.

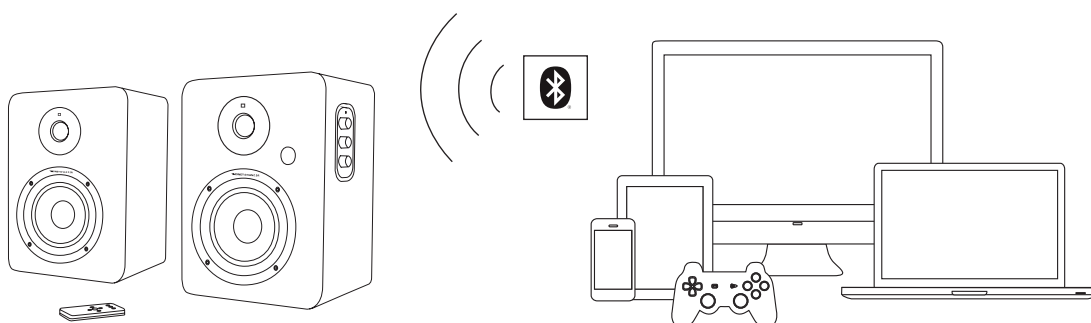


_02 BLUETOOTH® PAIRING

Switch on the speaker. A blue light will start blinking, this means the speaker is in **pairing mode**. Turn on Bluetooth® on your device (smartphone, tablet, PC, etc.) and select **KÜRBIS™** to pair the speaker. The light will stop blinking once the connection is established. If pairing fails, try again. If you require further support, please send an e-mail to support@thonet-vander.com. For switching from any other mode to Bluetooth® mode, press the INPUT button [3] repeatedly on your remote control until the led turns blue or go to the Speaker Side Panel and press the Volume button [B].

_03 VOLUME CONTROL | From Side Panel


- A_** Mode LED on
B_ Digital Volume Control / Mode button
 (Switch Bluetooth®, Optical, Aux mode)
C_ Adjust treble or high frequencies
D_ Adjust bass or low frequencies

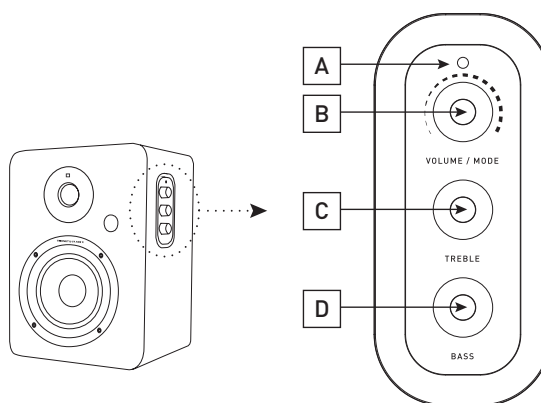**_04 REMOTE CONTROL****REMOTE CONTROL**

- 1_** Stand by mode
2_ Mute
3_ Input selection
4_ Previous Track
5_ Play/Pause
6_ Next Track
7_ Increase Volume
8_ Decrease Volume

**LED ACTION [A]
on Side Panel**

- 1_** Steady red light
3_ Blue light: Bluetooth®
 Orange light: Optical
 Green light: Auxiliary
 White light: RCA

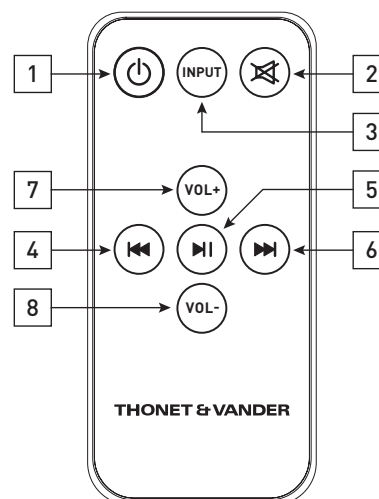**_05 ACCESORIES | Our KÜRBIS™ cinema 2.0 speakers include:**

- _ Remote Control
- _ RCA Stereo to 3.5 mm Stereo Auxiliary Cable
- _ Transparent cable for connecting passive speaker
- _ Power cable (plug IEC 60320 C7)* or power cable with ground tab (plug IEC 60320 C7)* or UK (plug BS 1363)*
- (*) according to country

_01 INSTALACIÓN DEL SISTEMA


A.




B.




C.

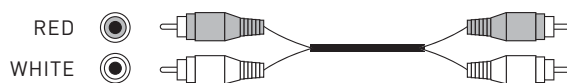

Cable RCA Estéreo a RCA Estéreo
(no incluido)

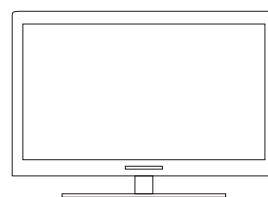


Cable RCA Estéreo a Auxiliar
Estéreo 3.5 mm (incluido)

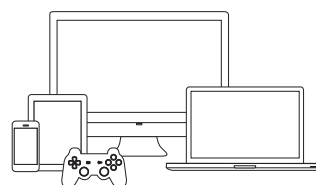

D.




Cable Óptico (no incluido)

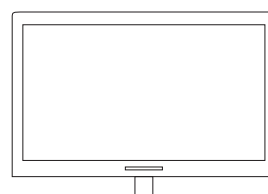


E.



Cable de Alimentación (incluido)

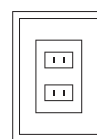

F.

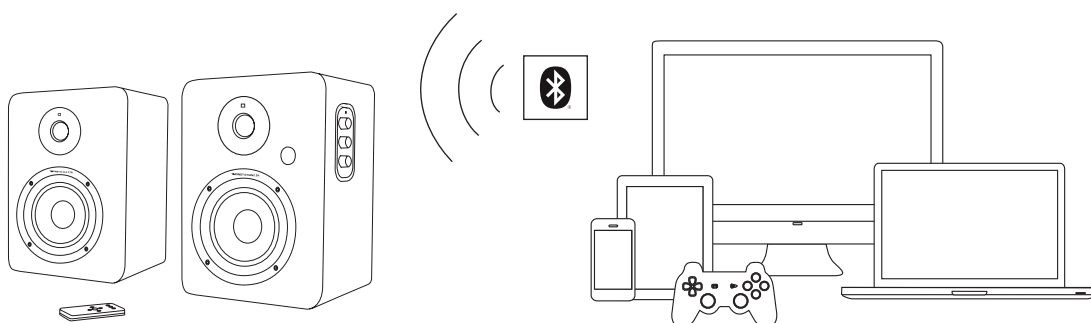


_02 EMPAREJAMIENTO BLUETOOTH®

Encender el parlante. Una luz azul comenzará a parpadear, esto significa que el altavoz está en **modo de emparejamiento**. Activar Bluetooth® en el dispositivo (smartphone, tablet, PC, etc.) y


seleccionar **KÜRBIS™** para iniciar conexión. La luz dejará de parpadear una vez establecida la conexión. Si la conexión falla, intente de nuevo. Si requiere mayor soporte, envíe un e-mail a support@thonet-vander.com. Para cambiar de cualquier otro modo al modo Bluetooth®, presione el botón INPUT [3] repetidas veces en su control remoto hasta que el led quede en azul o vaya al Panel Lateral del parlante y presione el botón de volumen [B].

_03 CONTROL DE VOLUMEN | Desde el Panel Lateral

- A_** Led de indicación de modo encendido
B_ Control de volumen digital / Botón cambio de modo (Bluetooth®, Óptico, Auxiliar)
C_ Ajuste de agudos o frecuencias altas
D_ Ajuste de graves o frecuencias bajas

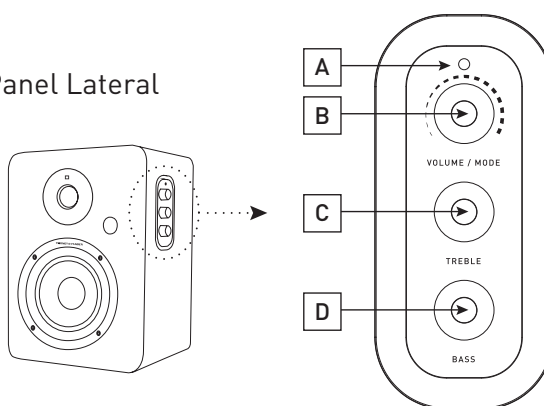**_04 CONTROL REMOTO**
**ACCIÓN DEL LED [A]
 en el Panel Lateral**

- | | |
|--------------------------------|--------------------------------|
| 1_ Stand by / Descanso | 1_ Luz roja permanente |
| 2_ Mute / Silencio | 3_ Luz azul: Bluetooth® |
| 3_ Selección de entrada | Luz naranja: Óptico |
| 4_ Pista anterior | Luz verde: Auxiliar |
| 5_ Reproducir/Pausa | Luz blanca: RCA |
| 6_ Pista siguiente | |
| 7_ Subir Volumen | |
| 8_ Bajar Volumen | |

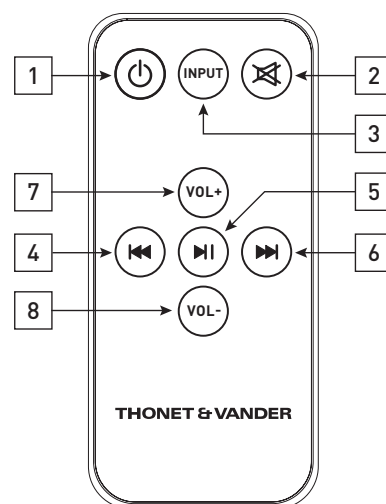**_05 ACCESORIOS | Nuestro KÜRBIS™ cinema 2.0 speakers incluyen:**

- _ Control Remoto
 - _ Cable RCA Estéreo a Auxiliar Estéreo 3.5 mm
 - _ Cable transparente para conexión de altavoz pasivo
 - _ Cable de Alimentación (conector IEC 60320 C7)* o Cable de Alimentación con toma a tierra (conector IEC 60320 C7)* o Cable Reino Unido (conector BS 1363)*
- (*) según país



Thonet & Vander Germany GmbH. All rights reserved. Thonet & Vander®, Deutsche Designtechnik and related trademarks, names and logos are the property of Thonet & Vander Germany GmbH and are registered and/or used in Germany and countries around the world. Other brands and trade names mentioned belong to their respective owners.

Thonet & Vander Germany GmbH. Todos los derechos reservados. Thonet & Vander®, Deutsche Designtechnik y las marcas comerciales, nombres y logotipos relacionados son propiedad de Thonet & Vander Germany GmbH y están registrados y/o utilizados en Alemania y países de todo el mundo. Otras marcas y nombres comerciales mencionados pertenecen a sus respectivos propietarios.



GERMAN
ENGINEERING
& DESIGN



GREEN
SOUND

Thonet & Vander Germany GmbH

Königstorggraben 11, (90402) Nürnberg, Germany.

© All rights reserved

info@thonet-vander.com | www.thonet-vander.com