




FLECK™ **gen2 outdoor speakers**

QUICK GUIDE
GUÍA RÁPIDA DE USO

_01 BLUETOOTH® PAIRING

Turn on the device by pressing ON/OFF button. You will see a blue light around the button and you will hear one beep. After this you can pair with your device just selecting "T&V Fleck 7 TWS" or "T&V Fleck 9 TWS".

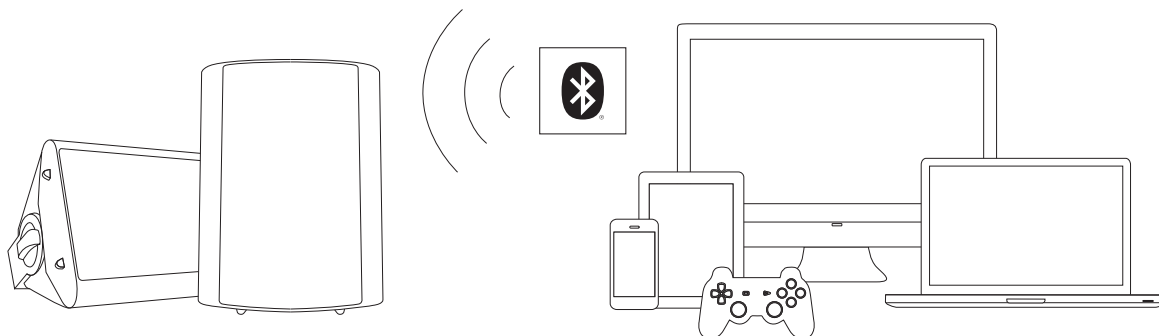


_02 TWS (TRUE WIRELESS STEREO)

NOTE: This function operates only with two Fleck™ 7 gen2 outdoor speakers.

A_ Turn on both speakers, you will hear a prompt tone. Then press and hold the power button on one of the speakers until another prompt tone is heard, release the button, now these two speakers are successfully paired.

B_ Then search "T&V Fleck 7 TWS" or "T&V Fleck 9 TWS" in the list of available Bluetooth® devices, input password "1010" and click to connect the speakers. You are ready to play now.

Note: Please disable Bluetooth® at your devices (Smartphone, Pad, PC...) before pairing the speakers. The speaker which you press and hold to pair will be the left one of stereo sound channels, and also the one you can find at your Bluetooth® devices. When you press to power off any one of the paired speakers, both will be powered off simultaneously. In case you have more than two (2) TWS speakers at site, please make sure all the rest speakers are powered off, when pairing any two (2) speakers among them. Support one passive speaker connection to any TWS speaker through wiring, so you can get four (4) speakers playing at same time and place.

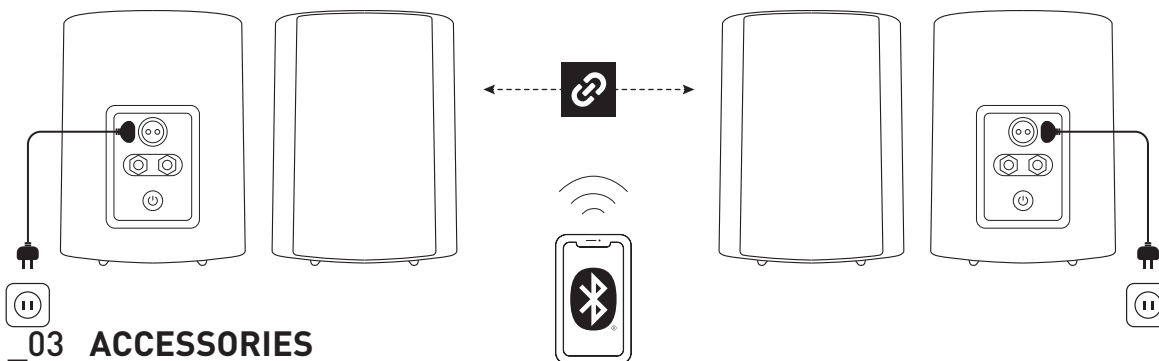


_03 ACCESSORIES

A_ Mounting bracket **B_** Cable for connecting passive speaker **C_** External power supply

_01 EMPAREJAMIENTO BLUETOOTH®

Encienda el dispositivo presionando el botón ON/OFF. Verá una luz azul alrededor del botón y escuchará un pitido. Después de esto, puede emparejar con su dispositivo simplemente seleccionando "T&V Fleck 7 TWS" o "T&V Fleck 9 TWS".

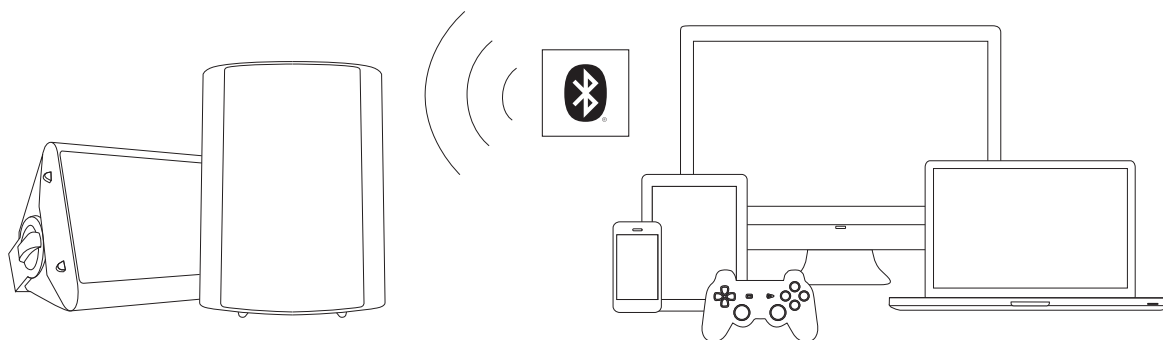


_02 TWS (TRUE WIRELESS STEREO)

NOTA: Esta función solo funciona con dos Fleck™ 7 gen2 outdoor speakers.

A_ Encienda ambos altavoces, escuchará un tono. Luego presione y mantenga presionado el botón de encendido en uno de los parlantes, hasta que se escuche otro tono y suelte el botón. Ahora estos dos altavoces se encuentran emparejados correctamente.

B_ Luego busque "T&V Fleck 7 TWS" o "T&V Fleck 9 TWS" en la lista de dispositivos Bluetooth® disponibles e ingrese la contraseña "1010" para conectarse a los altavoces. Ya está listo para reproducir.



Nota: Desactive Bluetooth® en sus dispositivos (Smartphone, Tablet, PC...) antes de emparejar los altavoces. El altavoz que mantenga presionado para emparejar será el del canal izquierdo del sonido estéreo, y también el que podrá encontrar en sus dispositivos Bluetooth® para vincularse. Cuando presione el botón para apagar cualquiera de los altavoces emparejados, ambos se apagarán simultáneamente. En caso de que tenga más de dos (2) altavoces TWS en el sitio, asegúrese de que todos los demás altavoces estén apagados al emparejar dos (2) altavoces entre ellos. Cada parlante activo admite una (1) conexión al altavoz pasivo a través de la conexión con cable, de modo que es posible reproducir hasta con cuatro (4) altavoces al mismo tiempo y en el mismo lugar.

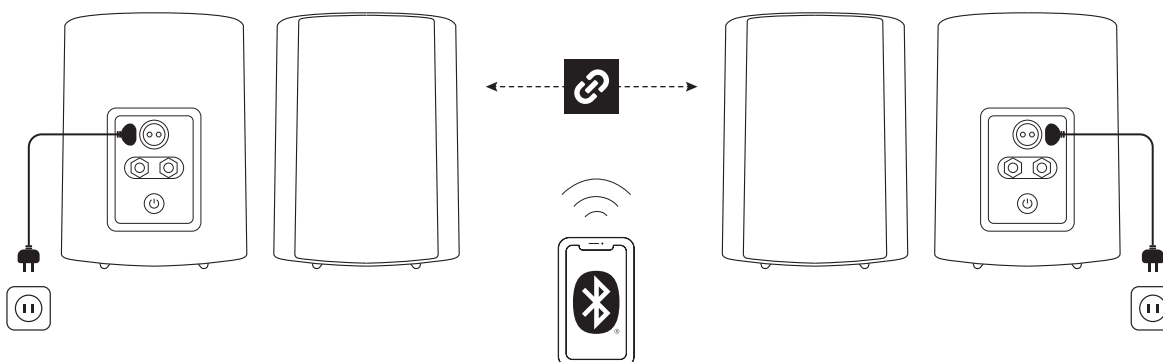

_03 ACCESORIOS

A_ Soporte de montaje **B_** Cable para conectar altavoz pasivo **C_** Fuente de alimentación externa

FLECK™ gen2 outdoor speakers

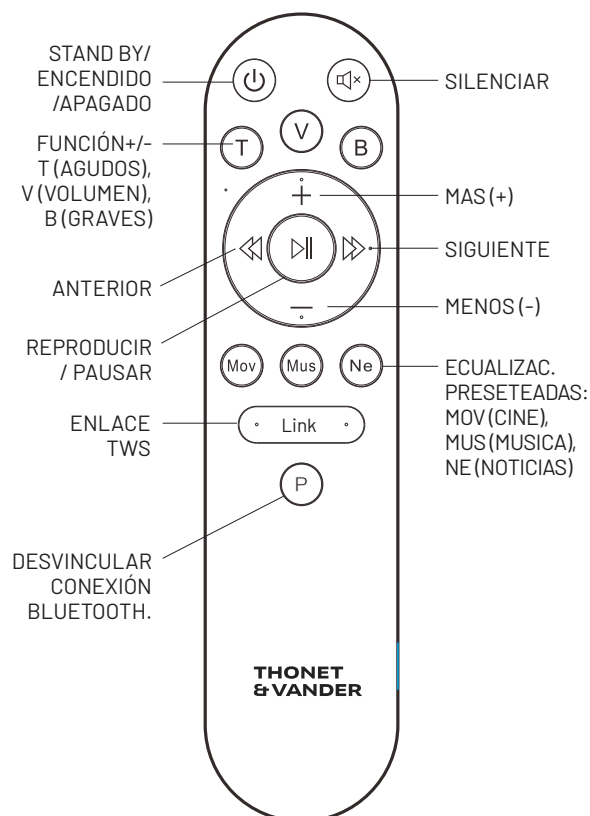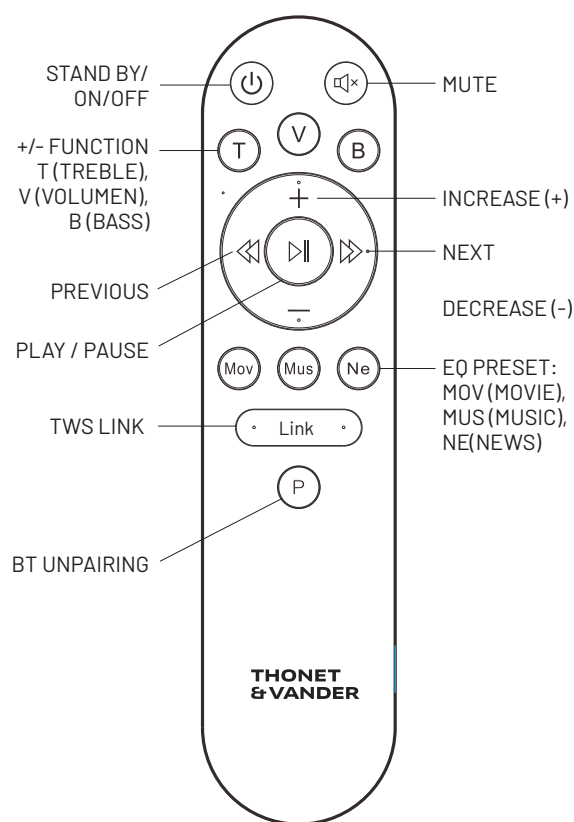



Thonet & Vander Germany GmbH. All rights reserved. Thonet & Vander®, Deutsche Designtechnik and related trademarks, names and logos are the property of Thonet & Vander Germany GmbH and are registered and/or used in Germany and countries around the world. Other brands and trade names mentioned belong to their respective owners.

Thonet & Vander Germany GmbH. Todos los derechos reservados. Thonet & Vander®, Deutsche Designtechnik y las marcas comerciales, nombres y logotipos relacionados son propiedad de Thonet & Vander Germany GmbH y están registrados y/o utilizados en Alemania y países de todo el mundo. Otras marcas y nombres comerciales mencionados pertenecen a sus respectivos propietarios.



GERMAN
ENGINEERING
& DESIGN



GREEN
SOUND

Thonet & Vander Germany GmbH
Königstorgraben 11, (90402) Nürnberg, Germany.
© All rights reserved
info@thonet-vander.com | www.thonet-vander.com